

# **Acousto-Optic Modulator Driver**

# Including: Basic Modulator Alignment for 1211 series

# Instruction Manual RFA9x0-110 Series

#### Models -

RFA910x-110	: 110MHz, >10W output
RFA920x-110	: 110MHz, >20W output

#### Options -x:

- L	: active low digital modulation (gate) no connection RF disabled
- V	: 0-5V analog modulation range
- A	: analog modulation only. No RF gate
- F	: fan fitted (+24Vdc)
- B	: BNC output connector (SMA standard)

ISOMET CORP, 5263 Port Royal Rd, Springfield, VA 22151, USA. Tel: (703) 321 8301, Fax: (703) 321 8546, e-mail: <u>isomet@isomet.com</u> <u>www.ISOMET.com</u> ISOMET (UK) Ltd, 18 Llantarnam Park, Cwmbran, Torfaen, NP44 3AX, UK.

Tel: +44 1633-872721, Fax: +44 1633 874678, e-mail: <u>isomet@isomet.co.uk</u>

Mar 07



## 1. <u>GENERAL</u>

The RFA9x0 Combined Analog Driver and Power Amplifier is a fixed frequency RF power source designed to operate with arrange of Isomet acousto-optic devices such as the 1211. The driver accepts <u>two</u> independent digital and analogue modulating signals and provides a double-sideband amplitude modulated RF output to the acousto-optic modulator. A summary of the driver specification is shown in the following table:

<u>Model</u>	<u>Use With</u>	Center Frequency	Output Power
RFA910-110	1211-UV	110MHz	12W typical, 10Watt minimum
RFA920-110	1211-3-985	110MHz	25W typical, 20Watt minimum

Figure 2 is a functional block diagram of the driver. The center frequency of the driver is determined by the free-running quartz-crystal oscillator at 110MHz. This frequency is accurate to within  $\pm$  0.005% and its stability is better than  $\pm$  0.003%; the oscillator is not temperature stabilized.

A high-frequency, diode ring modulator is used to amplitude-modulate the RF carrier. The single turn potentiometer provides gain control for adjusting the maximum r-f power at the Driver output.

A solid state switch provides the Digital Modulation or RF Gating function. A TTL high level will gate the RF ON. The MMIC r-f pre-amplifier stage isolates the low level modulation and control circuitry from the power amplifier stage.

The rise and fall times for the amplifier from either modulation input is identical (approx 200nsec and 40nsec resp').

# The video analog input level must not exceed 15 volts The digital input level must not exceed 7 volts

This amplifier is designed to operate at full rated power into a  $50\Omega$  load with 100% duty cycle.



# Forced air cooling is recommended. The heatsink temperature must not exceed 70°C.

# SERIOUS DAMAGE TO THE AMPLIFIER MAY RESULT IF THE TEMPERATURE EXCEEDS 70°C. SERIOUS DAMAGE TO THE AMPLIFIER MAY ALSO RESULT IF THE RF OUTPUT CONNECTOR IS OPERATED OPEN-CIRCUITED OR SHORT-CIRCUITED.

A low impedance d-c power source is required. The operating voltage is +24V or +28Vdc at a current drain of approximately 2.0A. The external power source should be regulated to  $\pm$  2% and the power supply ripple voltage should be less than 200mV for best results.

The output power level is set by the power adjust potentiometer (PWR ADJ) **NOTE : Maximum power = fully clockwise** 

## 1.1 ANALOG MODULATION

To intensity modulate a laser beam in an acousto-optic modulator requires that the input RF carrier voltage (power) be varied according to the video or baseband information. From the viewpoint of intensity modulation, the deflection efficiency equation is normalized as:

 $i_1 = Sin^2 (kE_{RF})$ 

where  $i_1$  is the instantaneous intensity in the first order diffracted beam and  $E_{RF}$  is the instantaneous RF <u>envelop</u> voltage across the matched transducer.

In effect, the acousto-optic interaction demodulates the RF carrier, transforming the modulation envelop (baseband signal) into intensity variation of the first order diffracted laser beam.

Figures 3 and 5 show the main AO modulator parameters



# 2 <u>LED INDICATORS</u>

The front panel LEDs serve to indicate a number of possible operating states.

The LEDs [C] and [D] illuminate when the DC power is applied and the Interlocks are valid.



- [A] Shows GREEN when the RF output is live PROVIDED:
  - a) the modulation duty cycle is more than 20% (approx).
  - b) the RF CW power is > 25% (approx) of the driver maximum power
- [B] Shows RED if the RF output is disabled by the output protection circuitry. (High VSWR)
- [C] shows RED when the DC power is applied
- [D] shows GREEN when the (thermal) Interlocks are enabled

<u>Caution</u>, the RF output may be live even if these LED's are not illuminated.

#### LEDs Off

The LED [A] will not illuminate if the RF output is low power or low duty cycle

The LEDs [C] and [D] will not illuminate if :

- a) the internal driver thermal interlock switch is open (Over temperature fault)
- b) the AOM thermal interlocks switch is open (Over temperature fault)
- c) the AOM thermal interlock is not connected to the driver interlock input
- d) the DC supply is off.



The thermal interlocks will reset once the AO device and / or RF driver are cooled below the switching temperature.

- The driver thermal switch over temperature point is 50deg C
- The AOM thermal switch over temperature point is device dependent.
- (Typical values are 32deg C or 40deg C)

The hysterisis of the thermal switches is 7-10deg C.

Once in a fault state the coolant temperature may need to be reduced to reset the thermal switches.

The LED [B] will not illuminate if the RF output is disconnected or connected to an unsuitable load

Once the load fault has been corrected, the driver can be reset by turning the DC supply OFF and ON



## 3. INSTALLATION AND ADJUSTMENT

- 3.1 Ensure adequate air flow over the heat sink / fan
- 3.2 With no d-c power applied, connect the + 24V DC in to the center terminal of the feed-thru terminal. DO NOT APPLY POWER.
- 3.3 Connect the RF output SMA jack to the acousto-optic modulator (or a  $50\Omega$  RF load, if it is desired to measure the modulator RF output power).
- 3.4 Connect the <u>Int</u>erlock of the acousto-optic modulator (SMA, SMC or mini 3pin connector) to the enable inputs on the 9-pin D-type connector of the RFA9x0. e.g. Connect pin 4 of 'D' to the centre pin of the SMA/SMC and pin 5 of 'D' to the outer ground of the SMA/SMC AO device interlock connector. (If no interlock connector is fitted to the AO device, link pin 4 and pin 5)

The interlock connection becomes open circuit disabling the RF output, if the temperature of the modulator exceeds 32°C or the internal driver temperature exceeds 70°C. LED indicator illuminates when the Interlocks are closed and the RF is enabled (see Section 2). In addition, a CMOS 'interlock valid' signal output is provided on pin 1 of the D-type connector for remote monitoring purposes.

3.5 Adjustment of the RF output power is best done with amplifier connected to the acousto-optic modulator. The Amplifier maximum output power is factory preset to approx 5W.

The optimum RF power level required for the modulator to produce maximum first order intensity will be different at various laser wavelengths. Applying RF power in excess of this optimum level will cause a decrease in first order intensity (a false indication of insufficient RF power) and makes accurate Bragg alignment difficult. It is therefore recommended that initial alignment be performed at a low RF power level.

- 3.6 Locate the PWR ADJ access on the driver end plate.
- 3.7 With an insulated alignment tool or screwdriver rotate the PWR ADJ potentiometer fully anticlockwise (CCW), then clockwise (CW) approx 1/4 turn.
- 3.8 Apply DC to the amplifier.



- 3.9 Apply a 10.0V constant modulation signal to the modulation inputs on the D-type connector of the RFA9X0. Connect pin 8 of 'D' to the signal and pin 9 of 'D' to the signal return.
- 3.9.1 Apply a constant TTL high level to the digital modulation inputs on the D-type connector. Connect pin 6 of the 'D' to the signal and pin 7 of the 'D' to the signal return.

Input the laser beam toward the centre of either aperture of the AOM. For the 1211 series AOM, ensure the polarization is vertical with respect to the base and the beam height does not exceed the active aperture height of the AOM.

Start with the laser beam normal to the input optical face of the AOM and very slowly rotate the AOM (either direction). See Figure 4 below for one possible configuration.

- 3.10 Observe the diffracted first-order output from the acousto-optic modulator and the undeflected zeroth order beam. Adjust the Bragg angle (rotate the modulator) to maximise first order beam intensity.
- 3.11 After Bragg angle has been optimized, slowly increase the RF power (rotate PWR ADJ CW) until maximum first order intensity is obtained.
- 3.12 The driver is now ready for use for modulation using both the digital and the analog inputs.



# 4. <u>MAINTENANCE</u>

#### 4.1 <u>Cleaning</u>

It is of utmost importance that the optical apertures of the deflector optical head be kept clean and free of contamination. When the device is not in use, the apertures may be protected by a covering of masking tape. When in use, frequently clean the apertures with a pressurized jet of filtered, dry air.

It will probably be necessary in time to wipe the coated window surfaces of atmospherically deposited films. Although the coatings are hard and durable, care must be taken to avoid gouging of the surface and leaving residues. It is suggested that the coatings be wiped with a soft ball of brushed (short fibres removed) cotton, slightly moistened with clean alcohol. Before the alcohol has had time to dry on the surface, wipe again with dry cotton in a smooth, continuous stroke. Examine the surface for residue and, if necessary, repeat the cleaning.

## 4.2 <u>Troubleshooting</u>

No troubleshooting procedures are proposed other than a check of alignment and operating procedure. If difficulties arise, take note of the symptoms and contact the manufacturer.

#### 4.3 Repairs

In the event of deflector malfunction, discontinue operation and immediately contact the manufacturer or his representative. Due to the high sensitive of tuning procedures and the possible damage which may result, no user repairs are allowed. Evidence that an attempt has been made to open the optical head will void the manufacturer's warranty.



#### **RFA 9x0 Standard Version**

# **Connection Summary**

1.0	<u>'D' Type Control Connection</u>	<u>'D' Type Control Connection</u>			
	Signal	Type	Pin out connection		
	Digital Modulation / GATE TTL high (>2.5V) = ON TTL low (<0.8V) or no connection = Off	Input	Signal pin 6 Return pin 7		
	Analogue Modulation 0.0V(off) to 10.0V(on)	Input	Signal pin 8 Return pin 9		
	Interlock (connect to AO modulator 'INT')	Input	Signal pin 4 Return pin 5		
	'Interlock Valid' monitor (CMOS compatible ~15V = OK)	Output	Signal pin 1 Return pin 2		

2.0 <u>Mounting Holes</u>

4 x 4.2mm clearance

Notes:

#### Both Digital GATE and Analog Modulation signals need to be applied.

The interlock signal must be connected. Contacts closed for normal operation.





Figure 1: Driver Installation (Driver shown with Fan Option)



Figure 2: Driver Block Diagram





**RF** Carrier



Modulation Signal Input



Amplitude Modulated RF Output

Typical analog modulation RF waveforms are shown above. For the RFA9X0 and similar drivers, the modulation input is a combination of analog and digital control as illustrated below.



Figure 3: Typical Analog Modulation Waveforms





Figure 4: Typical Connection Configuration



## **Basic AO Modulator Parameters**



where:

 $\begin{array}{ll} \lambda = \text{wavelength} \\ \text{fc} = \text{centre frequency} &= 110\text{MHz} \\ \text{v} = \text{acoustic velocity of interaction material} &= 5.7\text{mm/usec (Quartz)} \end{array}$ 

 $d = 1/e^2$  beam diameter

Figure 5. Modulation System